

TABLE OF CONTENTS

Paragraph	Page	Paragraph	Page
INTRODUCTION	1-1	ADJUSTMENT	4-1
1.1 General Information	1-2	4.1 Typing Unit	4-2
1.2 Reference Documents	1-3	4.2 Transmitter Distributor	4-14
1.3 Equipment and Materials Required	1-3	4.3 Typing Reperforator	4-18
INSPECTION	2-1	4.4 Base	4-30
2.1 Preliminary Procedure	2-2	CLEANING	5-1
2.2 External Appearance	2-2	5.1 Internal	5-2
2.3 Leveling	2-2	5.2 External	5-2
2.4 Internal Appearance	2-2	TESTING	6-1
LUBRICATION	3-1	6.1 General	6-2
3.1 General	3-2	6.2 Keyboard Send-Receive (KSR)	6-2
3.2 Keyboard	3-4	6.3 Automatic Send-Receive (ASR)	6-3
3.3 Typing Unit	3-14	6.4 Receive-Only (RO)	6-4
3.4 Transmitter Distributor	3-76	6.5 Terminal Restoral	6-5
3.5 Reperforator	3-100		
3.6 Answer-Back	3-126		